



Le Rail, Club de modèles réduits, Lausanne **Centrale digital ECoS**



Conduite d'une locomotive avec une télécommande radio



Ces télécommandes radio (sans fil) permettent de conduire les trains à distance.



Il suffit choisir sa locomotive dans la liste selon attribution.

Attention de l'éteindre quand pas utilisé !



Manipulations à faire	Ecran de la télécommande
<p data-bbox="163 293 501 331">Présentation générale.</p> <p data-bbox="163 368 1088 443">Le bouton gris à droite de la lanière enclenche et déclenche la télécommande.</p>	
<p data-bbox="163 807 685 845">Une fois enclenché, elle s'identifie.</p> <p data-bbox="163 882 947 920">Son numéro s'affiche (ici, c'est la télécommande n°1)</p>	



Manipulations à faire	Ecran de la télécommande
<p>Puis elle va chercher la liste de locomotives que l'on a attribué dans la centrale ECoS.</p>	 A black handheld remote control with a central LCD screen. The screen displays the text "Sort locos" at the top, followed by "Sort locos" and "One moment..." in a larger font. Below the text is a blue rectangular button. The device has a numeric keypad on the left and several function buttons on the right. The top of the device is labeled "ECoSControl" and "2.4 GHz HIGH SPEED BI-DIRECTIONAL RF SYSTEM".
<p>Enfin cette liste s'affiche sur l'écran.</p>	 The same handheld remote control as in the previous image. The screen now displays a "loco list" with the following information: "4570 - RZ NNL" and "CLR CFF Re 4/4". There are several small icons at the bottom of the screen, including a left arrow, a right arrow, a power symbol, and a checkmark. The device is now connected to a cable with a ring at the bottom.


Manipulations à faire	Ecran de la télécommande
<p>Pour sélectionner la locomotive souhaitée, il y a 2 possibilités :</p> <ul style="list-style-type: none">• pousser la manette à droite ou à gauche	
<p>appuyer sur le bouton en bas (deuxième depuis la gauche).</p>	

Manipulations à faire	Ecran de la télécommande
<p>Avec le petit «V» en bas à droite de de l'écran, on est en mode de sélection de locomotive.</p>	
<p>Choisir sa locomotive en poussant la manette à droite ou à gauche.</p> <p>Confirmer en appuyant sur le bouton identifié par le «V».</p>	

Manipulations à faire	Ecran de la télécommande
<p>On peut maintenant rouler.</p>	 A close-up photograph of a person's hands holding a black ESU EcoSControl remote control. The device has a blue top section with the 'ESU EcoSControl' logo. Below the logo is a small LCD screen displaying a green background with a train icon and the number '1/28'. To the left of the screen is a numeric keypad (0-9) and function buttons. To the right is a joystick and a power button. The person's right thumb is resting on the joystick.
<p>Pour accélérer, pousser la manette vers le haut. Pour ralentir, pousser la manette vers le bas.</p>	 A close-up photograph of the same ESU EcoSControl remote control. The LCD screen now displays the number '12/28'. A red circle is drawn around the joystick on the right side of the device, which is being held by the person's right hand.

Manipulations à faire	Ecran de la télécommande
Changer de sens de marche.	 A close-up photograph of a hand holding a black remote control. The screen displays '2.4 GHz HIGH SPEED BIDIRECTIONAL RF SYSTEM' at the top. Below that, it shows 'CLR CFF QY' and a train icon. A red circle highlights the 'CLR' button on the left side of the screen.
Appuyer sur la touche en bas à gauche pour la fonction F0.	 A close-up photograph of a hand holding the same remote control. The screen now displays 'F0 CLR CFF QY' and the train icon. A red circle highlights the 'F0' button on the left side of the screen.

Manipulations à faire	Ecran de la télécommande
<p>Fonction F1 à F10 (ici F1)</p>	
<p>Modèles avec beaucoup de fonctions, pour l'ICN :</p> <ul style="list-style-type: none"> • F1 F6 • F2 • F3 F8 • F4 F9 • F5 F10 • F0 	

Manipulations à faire	Ecran de la télécommande
<p>Accès au fonctions F11 à F20 :</p> <ul style="list-style-type: none"> • F11 • F12 • F13 • F0 	
<p>Arrêt d'urgence « STOP ».</p>	